



Assembly Instructions for THE BUNKER™

THE BUNKER™

Fly-First Pitch Type Design



Snugpak

www.SNUGPAKUSA.com

Snugpak® products are exclusively distributed in North & South America by:
PROFORCE EQUIPMENT, INC.
3230 Executive Way - Miramar, FL 33025
Ph: 305.436.7984 / 800.259.5962
www.PROFORCEEQUIPMENT.COM


www.SNUGPAK.com

Snugpak LTD
Waterloo Mills, Howden Road
Silsden, West Yorkshire
BD20 0HA, England
Tel: +44 (0) 1535 654479 Fax: +44 (0) 1535 652503

-  x2 Black Tip
-  x1 Green Tip
-  x19 Alloy Stakes


Pole Placement

1. Insert the Green Tipped Pole with Green section to Green trim edging.
2. Insert one Black Tip Pole into Pole Channel Sleeve 2.
2. Insert the other Black Tip Pole into Pole Channel Sleeve 3.

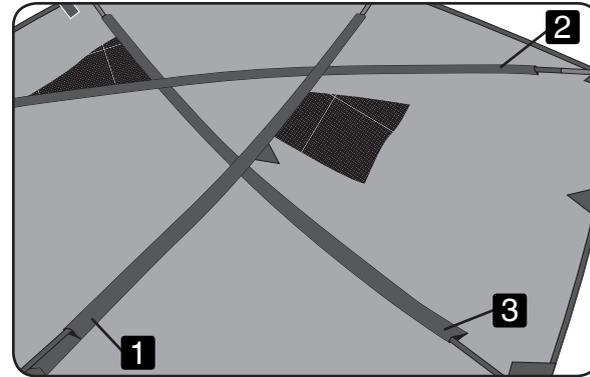

Additional Ultralight Alloy Original Stakes can be purchased separately. Aftermarket stakes can also be used with this tent whether it be with the loop webbing or through the secondary grommet available.

1

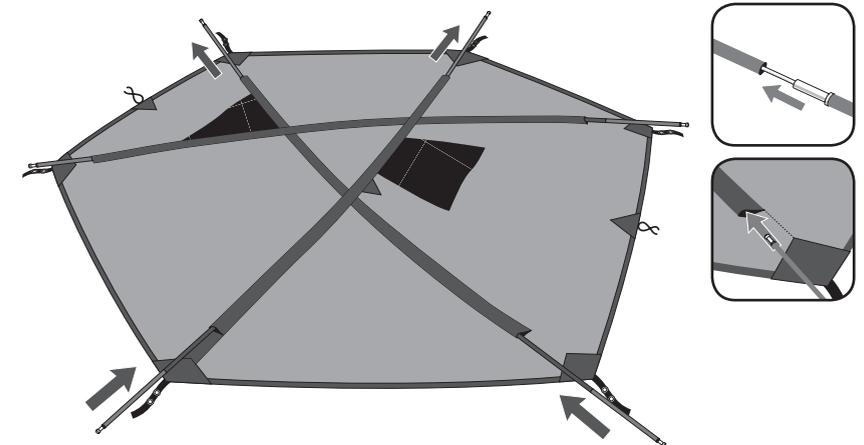

- a. Take out the Fly (Outer Tent) and unfold and spread it out.
- b. Assemble Pole Sections - Carefully unfold the pole sections and allow them to slide together by inserting within one another.
- c. Insert the poles into the pole sleeve channels.
(We recommend to always push poles through, do not pull through sleeve channels).

2



- a. Insert the tent pole ends into the grommets in the corresponding webbing straps. Once all the pole ends are inserted into the grommets the fly should now stand erected.
- b. The pole channels and poles should intersect for proper form, support and structure.
- c. Now unzip a door, or both, to gain access to the inside of the Fly (Outer Tent).
- d. Take the Inner Tent and line up the Door and vents and start to attach the toggle to the corresponding supporting ring on the Fly (recommend one start from the back and work their way out from the main door and vestibule).

3



- a. Once the Inner Tent is connected with the Fly by all the Toggle and Ring attachments, then click all the side release buckles together.
- b. Take the Ultralight Alloy Stakes that came with the tent and run them through the loop of the webbing with the grommets and stake down accordingly.
- c. Once the tent is Staked out / down then adjust the tension of the Side Release buckles to achieve the desired result.
(Note: there is a secondary grommet visible on webbing strap for different stakes if needed).